

# Instructions for CamStick-SD Mini DVR

## Welcome

Thank you for purchasing the new top of the line CamStick-SD. The following product manual will help you to install and operate your new device. Please be sure to fully read the directions before proceeding to use your new CamStick-SD.



## Operation

1.) Before using this product please ensure that all accessories were included in the packaging and that the product is fully charged before use. You will also need to insert the included Micro SD Card into the device before you are able to use it.

2.) Push the power switch to the ON position, the indicator light on the device should turn a steady yellow color to indicate that it is in voice-activated standby mode.

**Note:** 1.) If the battery in the device is low, the yellow indicator light will instead flash instead of remaining solid. After a two-minute period, the device will then shut itself down.

3.) If the Micro SD Card is full, the indicator light will flash yellow for 30 seconds and then shut itself down automatically.

4.) If no Micro SD Card is installed, the indicator light will flash for one minute and then shut itself down.

### 5.) Video Recording

1. Upon turning the device on, the yellow light should remain steady to indicate that voice-activation mode is enabled. In this mode, if there is any noise above 65dB it will begin to record automatically.

After a steady two minute period of no noise of at least 65dB or greater, the device will stop recording and go back into standby mode.

### 6.) Manual Video Recording

1. After starting up the device, press the function key, the indicator light should change to a blue color indicating the device is recording.

To stop recording, simply press the function key once more. The footage will be saved and the device will enter standby mode once more.

**Note:** If the unit receives no more commands within 30 seconds it will turn itself off automatically.

## Charging

Please ensure that the unit is OFF before connecting the battery to a charger. Upon connecting the unit, the indicator light should be a steady red. When the unit has fully charged, the red indicator light will go out. If you wish to use the device while it is charging, turn it on after connecting the device then press the mode select button. While charging and in use, two indicator lights will be visible.

Indicator	Status	Indicates
Yellow	Steady	Voice-Activated Standby
	Slow Flash	Voice-Activated video status
	Rapid Flash	Low Battery, no USB, or reading USB data
Blue	Steady	Manual video standby state
	Slow Flash	Manual video working state
Red	Steady	Photographing standby
	One Slow Flash	Take a photo and save it
Green	Steady	Sound recording standby
	Slow Flash	Sound recording working status
Red (Charging)	Steady	Charging
	Off	Charge complete